



Electronique & Spectacle
 Jérôme Barbé
 53 rue des Batignolles
 75017 Paris
 tel : 01 42 63 06 66
 electronique-spectacle.com

DJR400 Peak meter


output level with this setting of pots

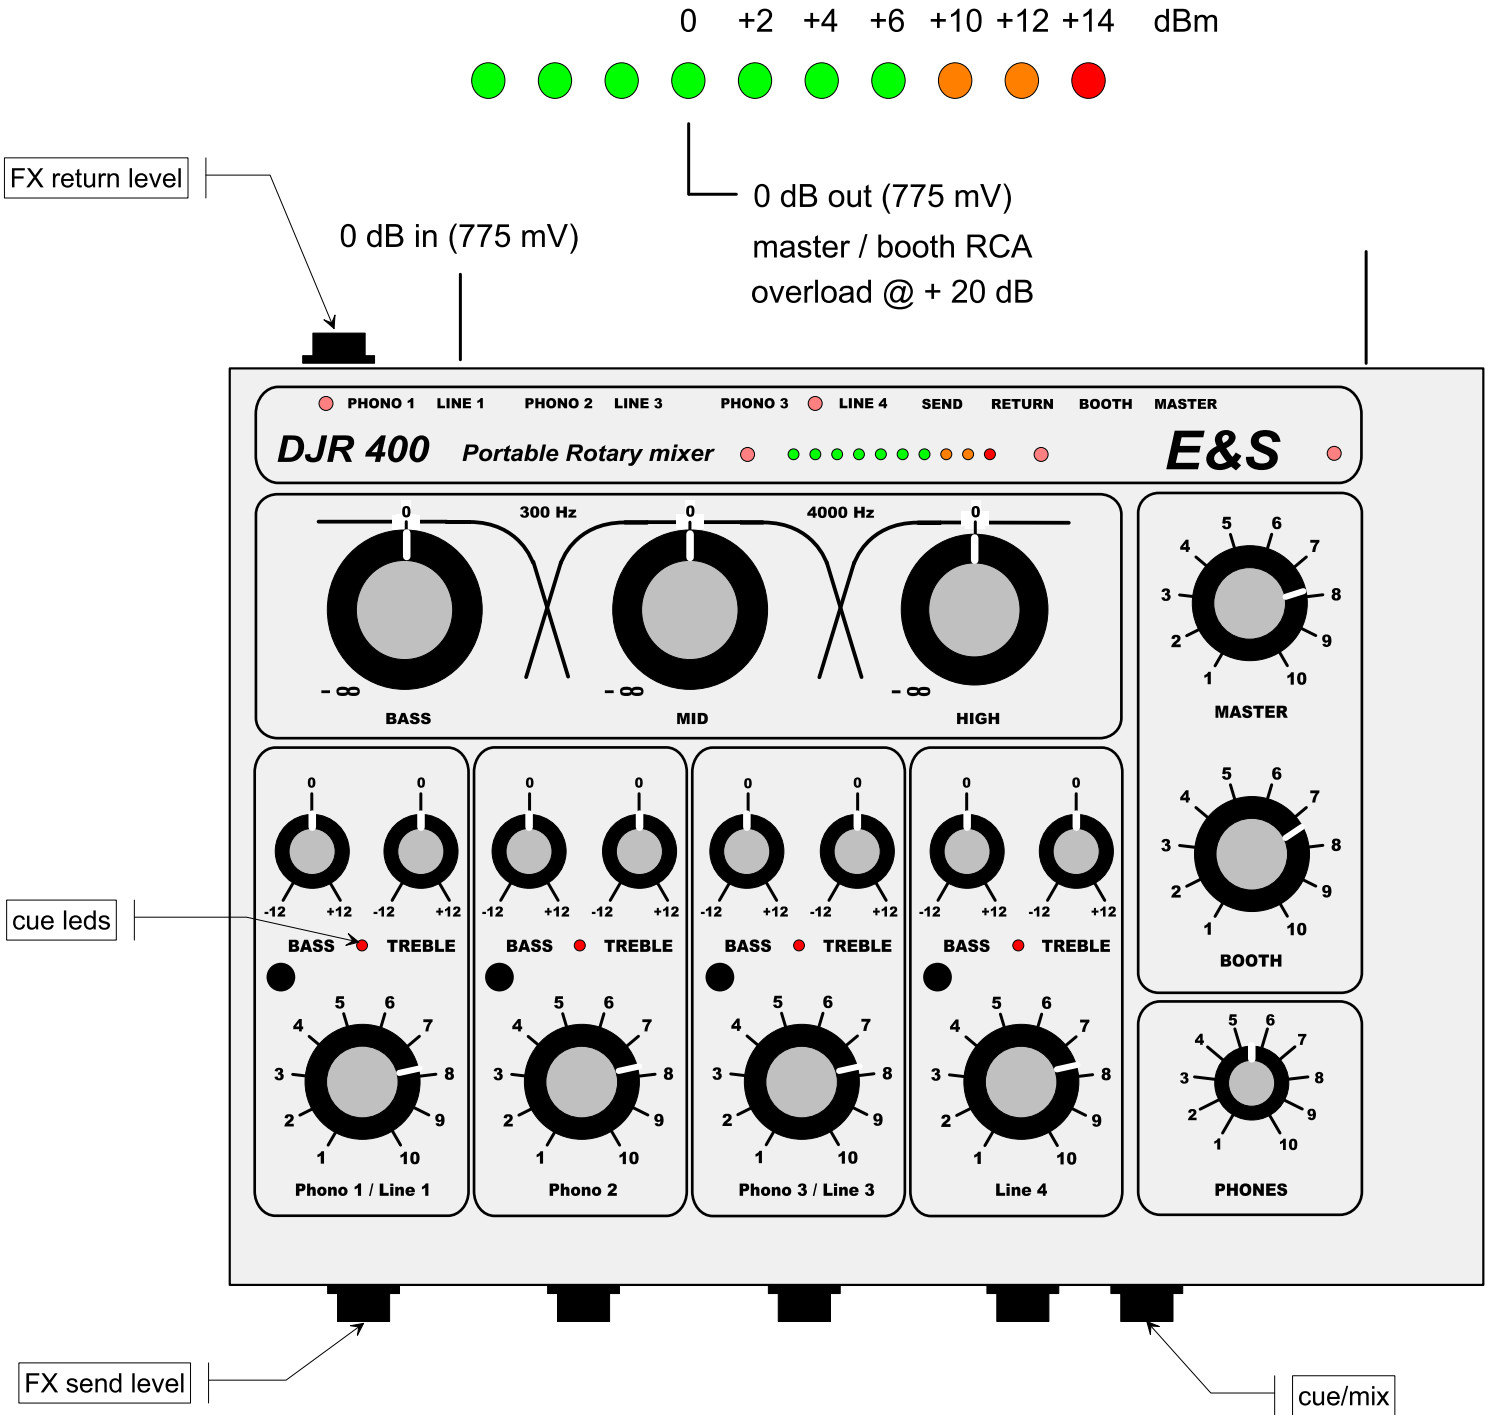


Isolator Potentiometer curve

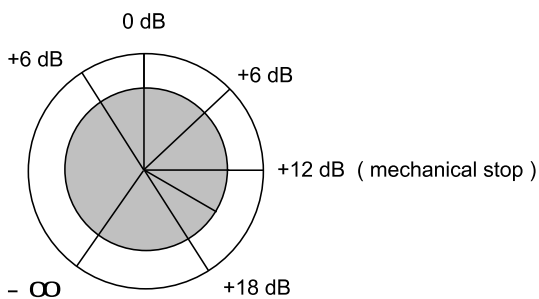

Channel Potentiometer curve

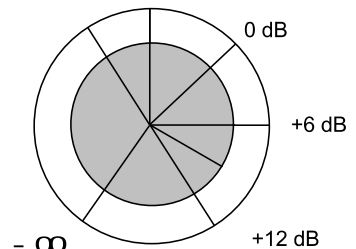

DJR400 Installation

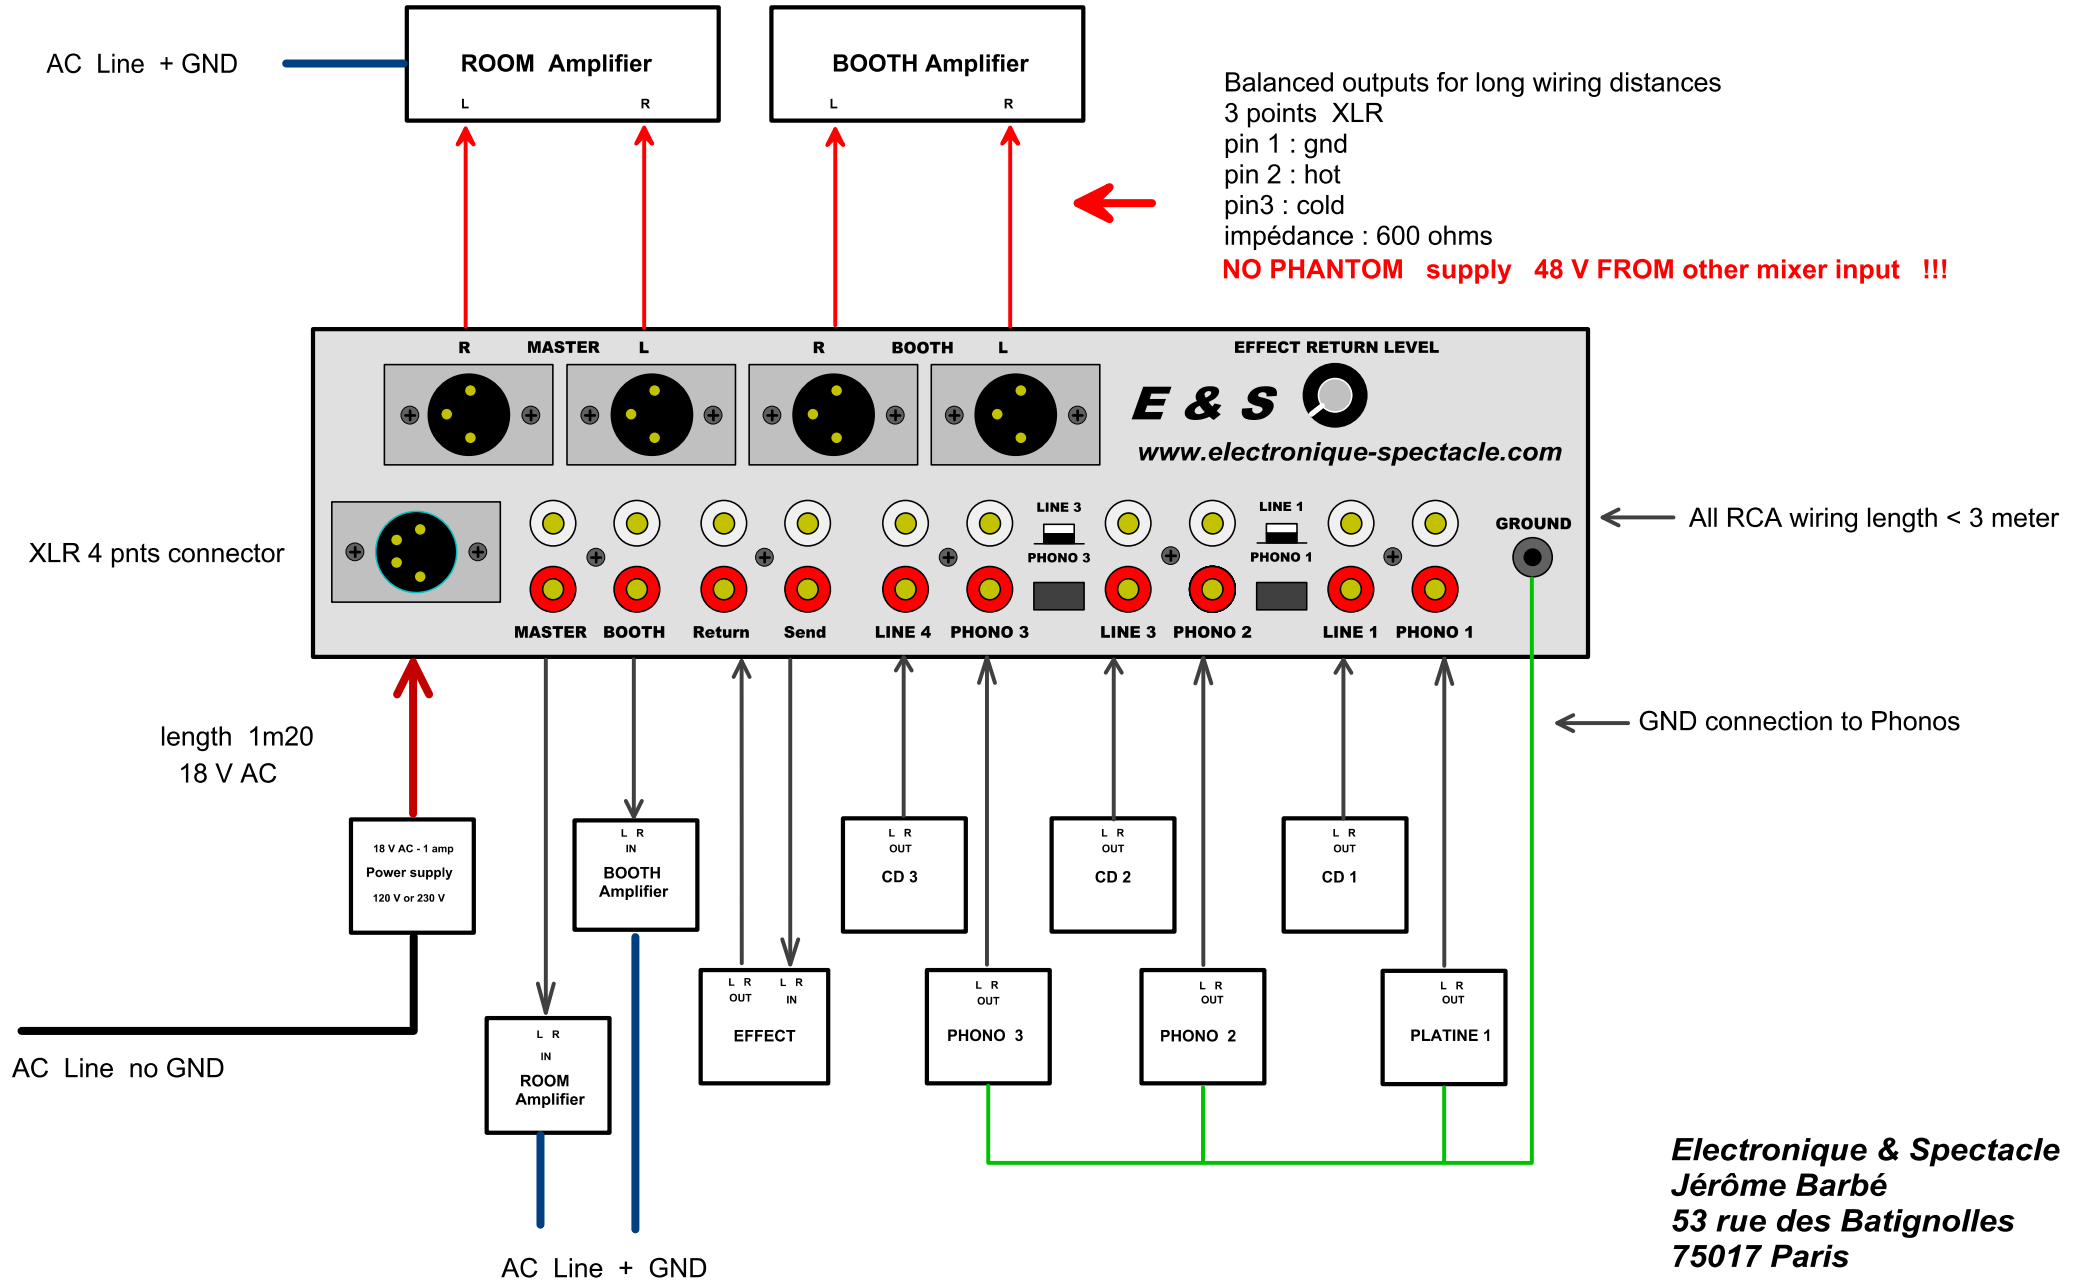


Electronique & Spectacle
Jérôme Barbé
 53 rue des Batignolles
 75017 Paris
 tel : 01 42 63 06 66
 electronique-spectacle.com

E&S DJR 400 FILTERS


Tone control Baxandall

Each Channel

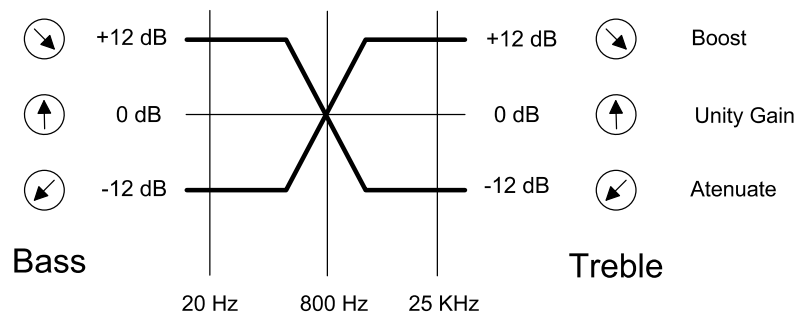


3 Band Isolator

Master output

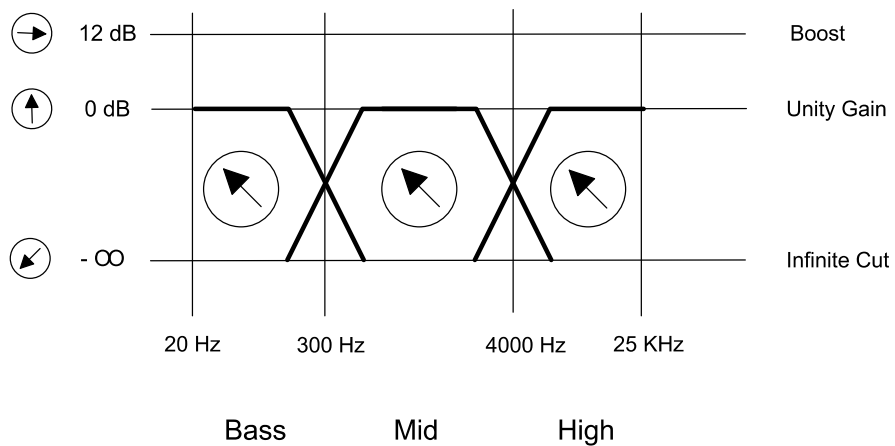

Electronique & Spectacle
Jérôme Barbé
53 rue des Batignolles
75017 Paris
tel : 01 42 63 06 66
electronique-spectacle.com

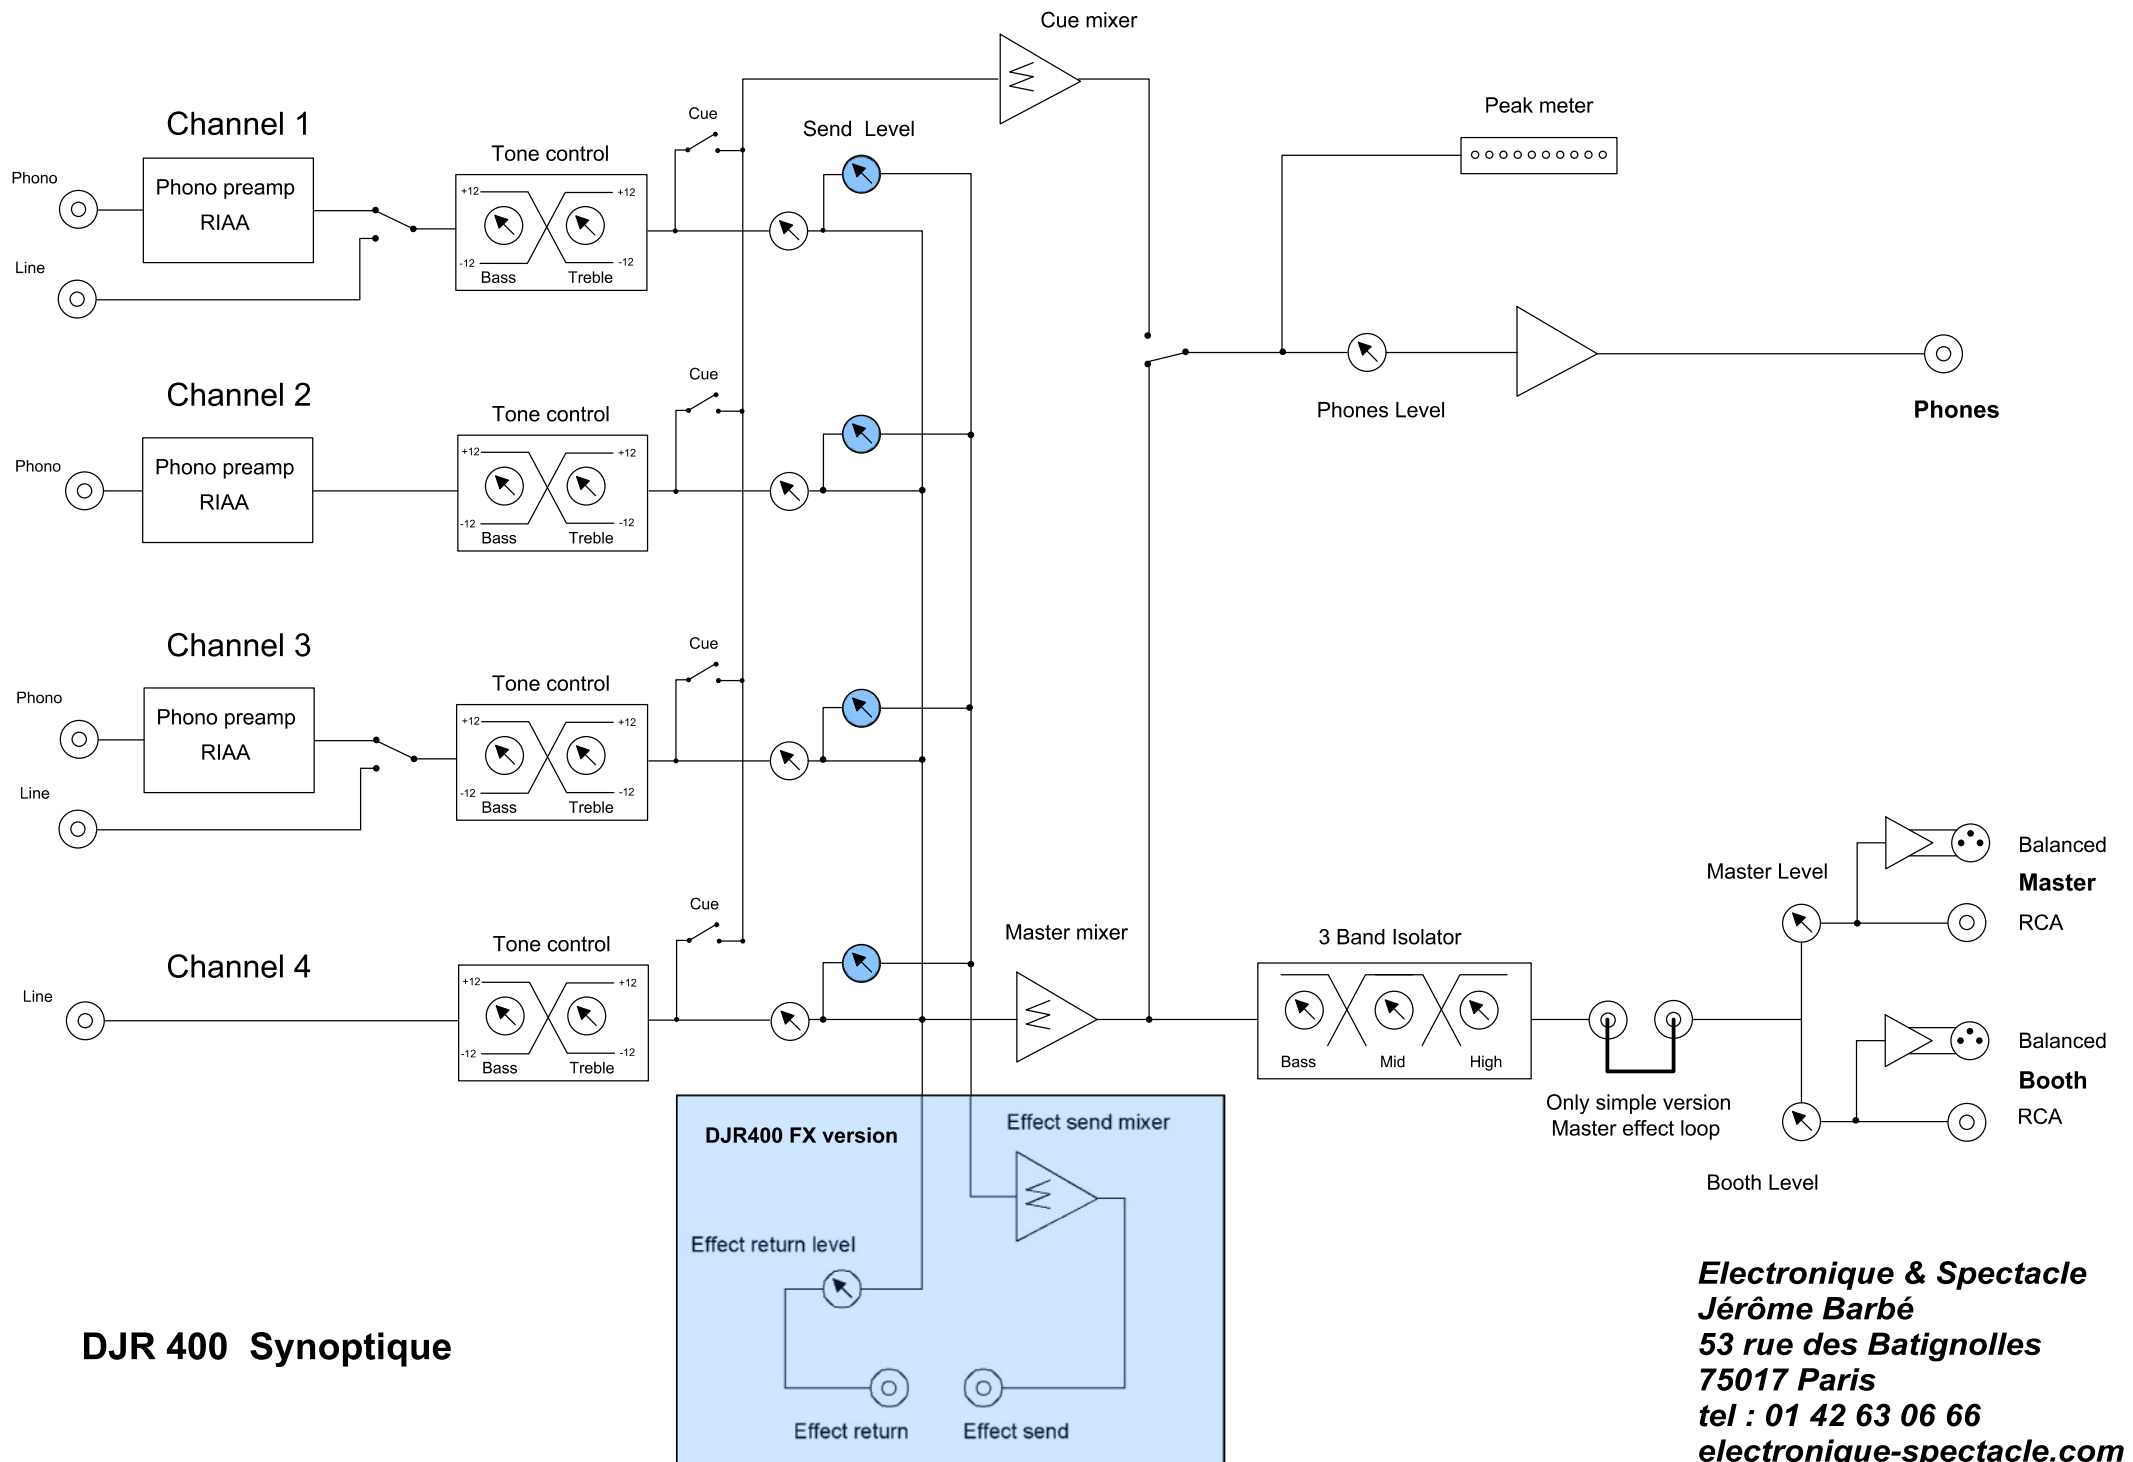


DJR 400 Synoptique


Electronique & Spectacle
Jérôme Barbé
53 rue des Batignolles
75017 Paris
tel : 01 42 63 06 66
electronique-spectacle.com

DJR 400 Master - Booth Outputs

Balanced wiring

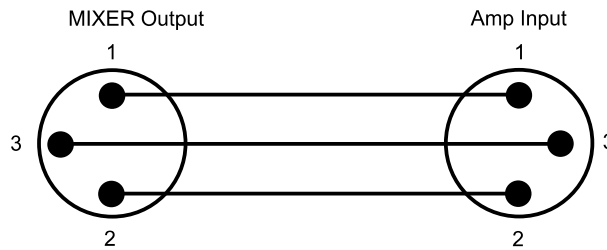





Unbalanced wiring

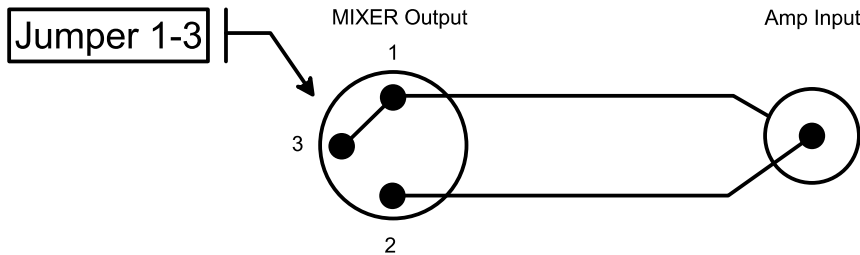

Be very careful not to connect XLR outputs to a phantom 48 V input this could destroy the output drivers of the DJR 400 !!!

DJR 400 Headphone mono wiring

 CAUTION !!! : Adjust headphone sound to the proper volume. Loud sound may damage your ears

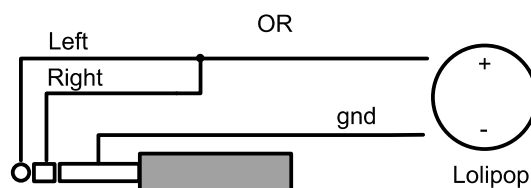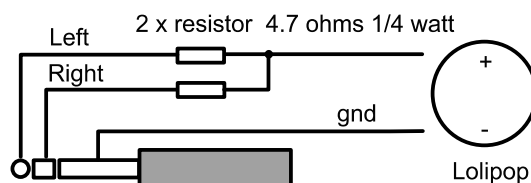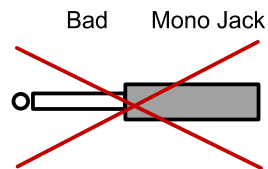

USER-INSTALLER CAUTION :

Power Sources This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home consult your appliance dealer or local power company

Use it under the following environmental conditions:

Temperature: 0°C - 40°C (32°F-104°F)

Humidity: 30% - 85% (No condensation)

Avoid heavy shocks or dropping, hitting or any other type of strong impact

Never inspect the inside or remodel this machine, if the customer remodels this machine E&S will no longer guarantee its performance